

Solutions Murales PROSLAT inc. 225 Industriel blvd Chateauguay (QC) J6J 4Z2 1 888 691-2944

US Patent No: 6,315,136B1 All Rights Reserved International Patents Pending

12-TOTE COMPACT MODEL ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED

1. Powered Screwdriver with #2 Phillips-Head Tip

PARTS LIST


- 1. (8) Horizontal Crossbars
- 2. (4) Center Verticals
- 3. (2) Left & Right Rear Corner Verticals
- 4. (1) Left Front Corner Vertical
- 5. (1) Right Front Corner Vertical
- 6. (4) Wall Mount Flanges
- 7. (4) Wall Mount Extension Tubes
- 8. (12) Horizontal Sliderails

FASTENER LIST

- **1.** (60) #06 x 1/2" Fastening Screws
- 2. (08) #08 x 3/4" Wall Mount Extension Tube Fastening Screws
- **3.** (12) #10 x 1-1/2" Wall Mount Flange Screws
- 4. (12) Plastic Wall Anchors

TIP


Separate All Parts into Groups (as shown) and Familiarize. Read All Instructions Before Beginning Assembly.

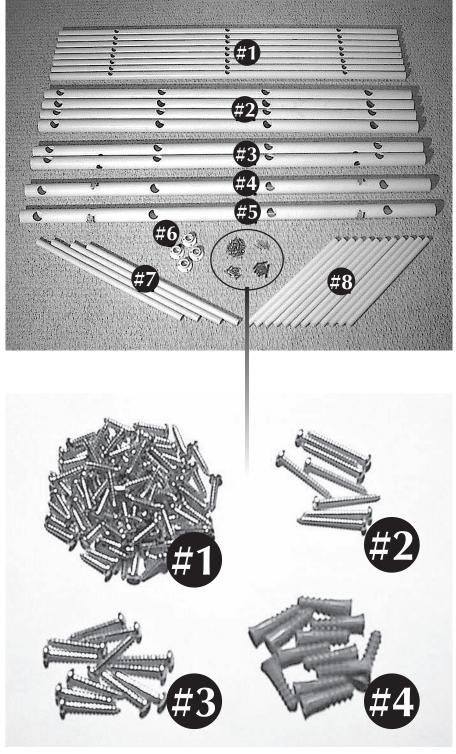


IMPORTANT: Do not install any fasteners until instructed!

Numbers in BOLD indicate item number from Parts/Fastener Lists.

FRONT GRID ASSEMBLY

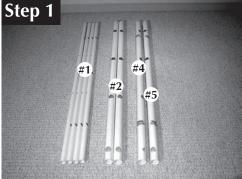


Parts Needed: 4 of #1 2 of #2 1 of #4 1 of #5

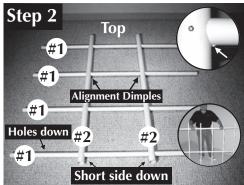


4 Horizontal Crossbars (#1) inserted through 2 Center Verticals (#2)

Tip: When installing second Center Vertical, stand assembly with Horizontal Crossbars placed on floor and push down second Center Vertical to Alignment Dimples.

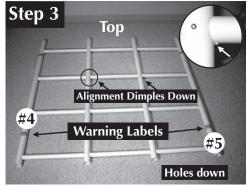


1 Left Front Corner Vertical (#4) and 1 Right Front Corner Vertical (#5) Placed on Horizontal Crossbars

REAR GRID ASSEMBLY

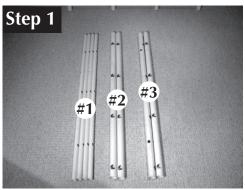


Parts Needed: 4 of **#1** 2 of **#2** 2 of **#3**

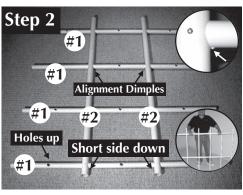


4 Horizontal Crossbars (#1) inserted through 2 Center Verticals (#2)

Tip: When installing second Center Vertical, stand assembly with Horizontal Crossbars placed on floor and push down second Center Vertical to Alignment Dimples.

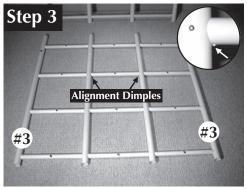


2 Left and Right Rear Corner Verticals (#3) Placed on Horizontal Crossbars

SLIDERAIL ASSEMBLY

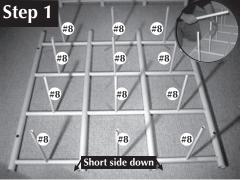

12 Horizontal Sliderails (#8) inserted in Rear Grid

Tip: If necessary tap Horizontal Sliderails to be sure Sliderails are fully inserted

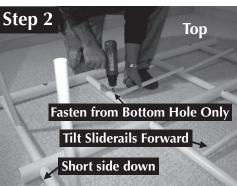

Fastening Horizontal Sliderails (**#8**) in Rear Grid using 12 - $\#06 \times 1/2^{\parallel}$ Fastening Screws (**#1**) Note: Start at top row and work down Use only one fastener - Bottom Hole Only



All Horizontal Sliderails fastened to Rear Grid Note: Fastener in Bottom Hole Only

IMPORTANT: Do not install any fasteners until instructed!

JOINING FRONT TO REAR GRID



Insert Bottom Sliderails (**#8**) into Front Grid Assemble and fasten (*making sure fully inserted*) using 3- #06 x 1/2" Fastening Screws (**#1**) **Note: Fasteners in Bottom Hole Only**



Insert and fasten next 3 rows of Sliderail to Front Grid using 9 - #06 x 1/2" Fastening Screws (#1) Note: Fasteners in Bottom Hole Only




Turn unit upright and place firmly against wall where unit is to be mounted.

FASTENING VERTICALS & WALLMOUNT TUBES




Fasten all Verticals to Horizontals. Make sure all joints are pressed firmly together, tight and against alignment dimples. 32 - #06 x 1/2" Fastening Screws (#1)

Note: 1 Fastener Per Joint, each grid, Front Side Only

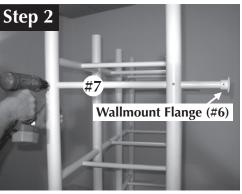

Move unit away from wall and insert 4 Wallmount Extension Tubes (#7) at 4 Locations. Fasten With 8 - #08 x 3/4" Extension Tube Fastening Screws (#2) Note: 1 Fastener Per Joint Front Side Only

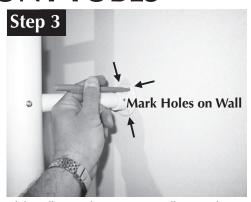

Slide Wallmount Flange (#6) into Wallmount Tube (#7) Place unit against wall where it is to be mounted and mark Wall Flange holes.

Note: Do NOT fasten at this time. Make sure unit remains in position at all 4 locations while marking holes.

FASTENING BIN WAREHOUSE TO WALL



Move unit away from wall and remove Wall Flanges from Tubes and mount Flanges to wall using 12 #10 x 1-1/2" Wall Mount Flange Screws (#3) and Plastic Wall Anchors (#4) if needed.

Note: If mounted into Masonry or Drywall, drill three 1/4" holes to accept Plastic Wall Anchors.



Slide unit back against wall while inserting all 4 Wallmount Extension Tubes (#7) into Wallmount Flanges (#6) and fasten with 4 - #06 x 1/2" Fastening Screws (#1).

Note: 1 Screw per Flange



Unit MUST be attached to wall to prevent from tipping over!

Congratulations!

We Hope You Enjoy Your Bin Warehouse!