

BIN WAREHOUSE

Solutions Murales PROSLAT inc.
225 Industriel blvd
Chateauguy (Quebec)
J6J 4Z2

US Patent No: 6,315,136B1 All Rights Reserved
International Patents Pending

FOR 8 STORAGE TOTES - ASSEMBLY INSTRUCTIONS


TOOLS REQUIRED

1. Powered Screwdriver with #2 Phillips-Head Tip



PARTS LIST

1. (8) Horizontal Crossbars
2. (2) Center Verticals
3. (2) Left & Right Rear Corner Verticals
4. (1) Left Front Corner Vertical
5. (1) Right Front Corner Vertical
6. (4) Wall Mount Flanges
7. (4) Wall Mount Extension Tubes
8. (8) Horizontal Sliderails

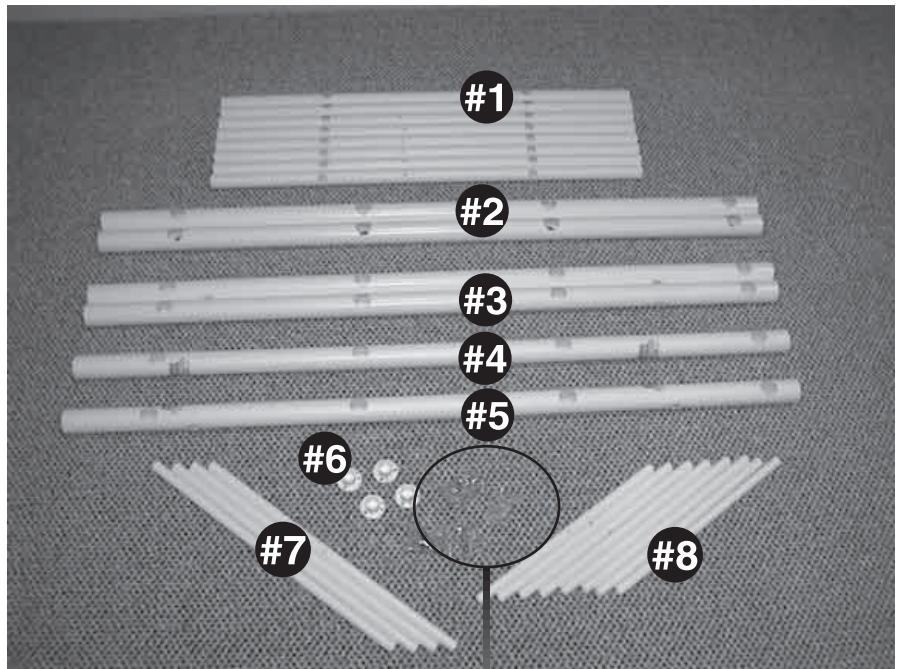


FASTENER LIST

1. (44) #08 x 3/4" Fastening Screws
2. (08) #08 x 1-1/2" Wall Mount Extension Tube Fastening Screws
3. (12) #10 x 1-1/4" Wall Mount Flange Screws
4. (12) Plastic Wall Anchors

NOTE:


Separate All Parts into Groups (as shown) and Familiarize. Read All Instructions Before Beginning Assembly

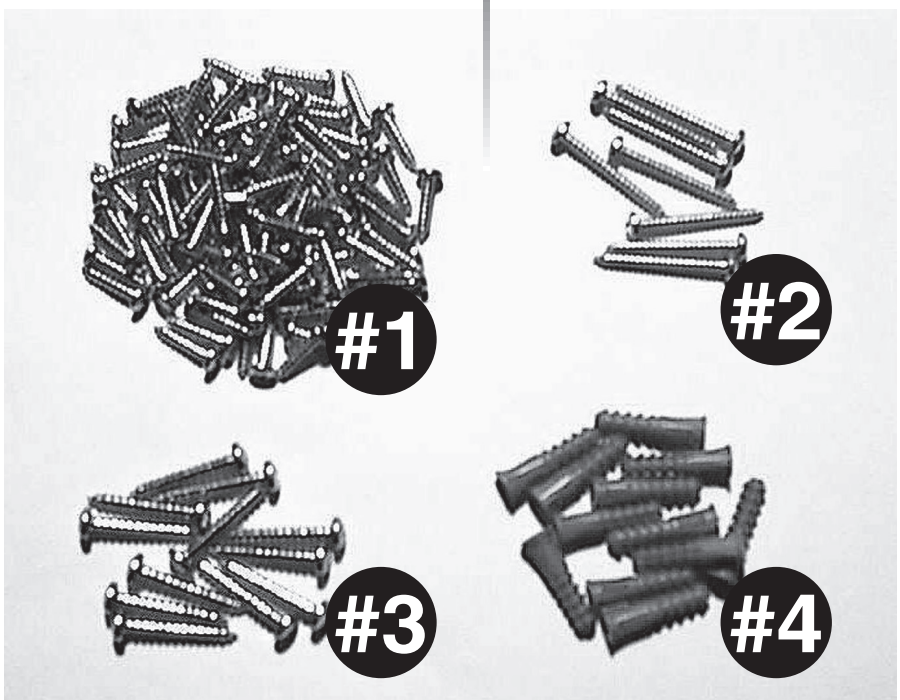


IMPORTANT: Do not install any fasteners until instructed!

Numbers in **BOLD** indicate item number from Parts/Fastener Lists.


FRONT GRID ASSEMBLY

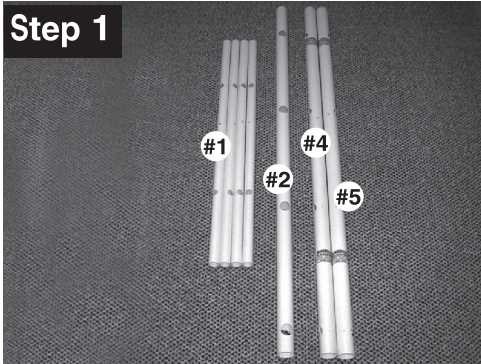

Parts Needed:
4 of #1 1 of #2
1 of #4 1 of #5

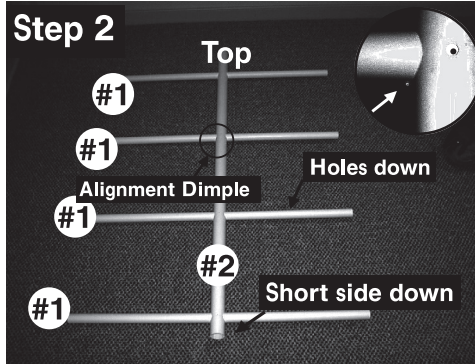


4 Horizontal Crossbars (#1) inserted through 1 Center Vertical (#2) *Note: Slide horizontal crossbar into left side of center vertical following direction of arrow until alignment dimple meets center vertical. (see enlargement)*

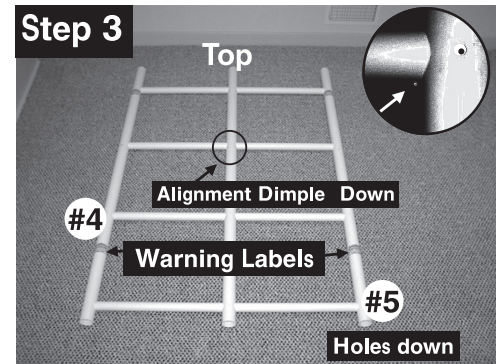


1 Left Front Corner Vertical (#4) and 1 Right Front Corner Vertical (#5) Placed on Horizontal Crossbars


REAR GRID ASSEMBLY

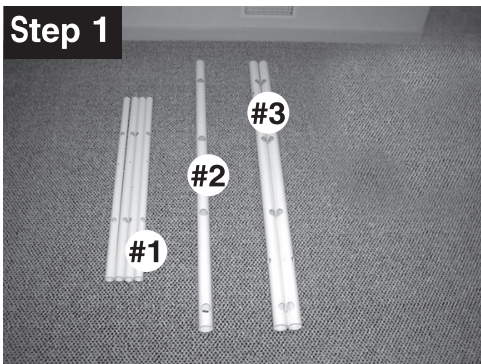

Parts Needed:
4 of #1 2 of #2
2 of #3

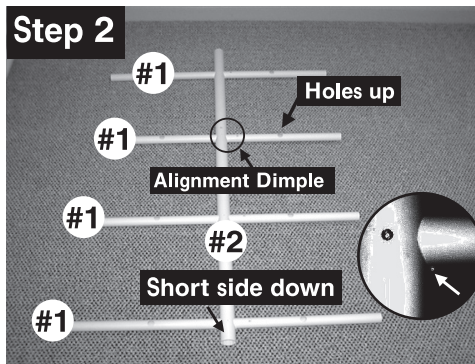


4 Horizontal Crossbars (#1) inserted through 2 Center Vertical (#2) *Note: Slide horizontal crossbar into right side of center vertical following direction of arrow until alignment dimple meets center vertical. (see enlargement)*

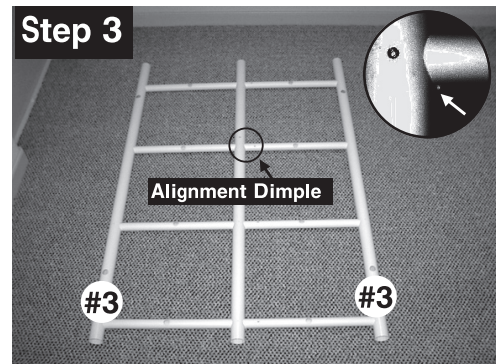


2 Left and Right Rear Corner Verticals (#3) Placed on Horizontal Crossbars

SLIDERAIL ASSEMBLY

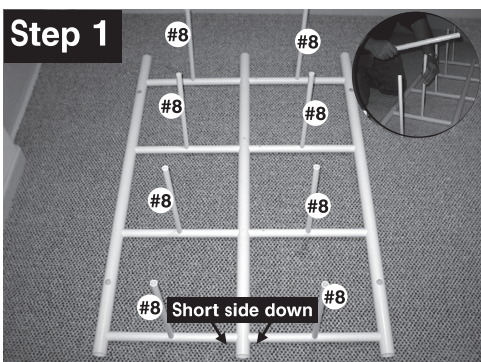


8 Horizontal Sliderails (#8) inserted in Rear Grid

Tip: If Necessary, Tap Horizontal Slide Rails to be sure Slide Rails are Fully Inserted

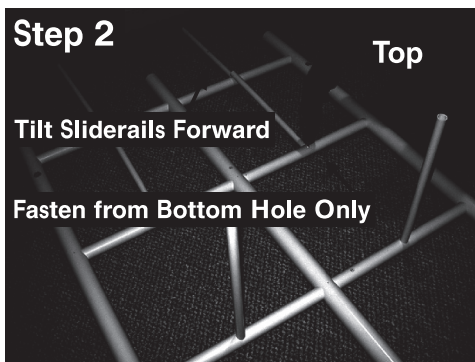

Fastening Horizontal Sliderails (#8) in Rear Grid using 8 - #08 x 3/4" Fastening Screws (#1) **Note: Start at top row and work down. Use only one fastener - bottom hole only**

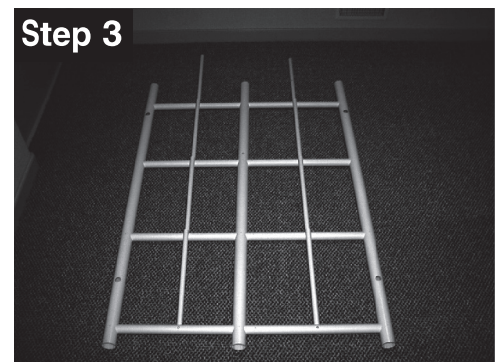


All Horizontal Sliderails fastened to Rear Grid **Note: Fastener in Bottom Hole Only**

IMPORTANT: Do not install any fasteners until instructed!


JOINING FRONT TO REAR GRID

Step 1

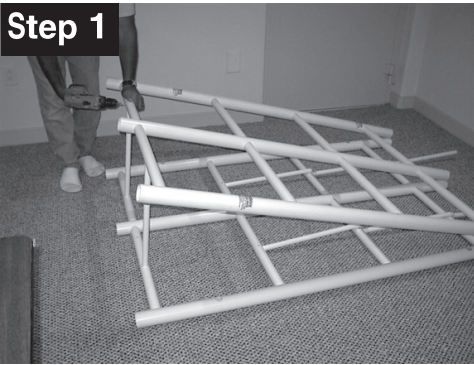

Insert Bottom Sliderrails (#8) into Front Grid Assembly and fasten (*making sure fully inserted*) using 2 - #08 x 3/4" Fastening Screws (#1)
Note: Fasteners in Bottom Hole Only

Step 2

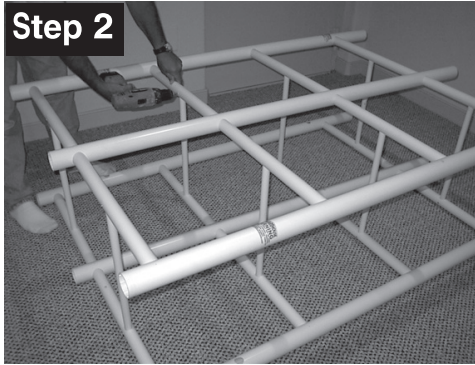

Insert and fasten next 3 rows of Sliderrail to Front Grid using 6 - #08 x 3/4" Fastening Screws (#1)
Note: Fasteners in Bottom Hole Only


Step 3



Turn unit upright and place firmly against wall where unit is to be mounted.


FASTENING VERTICALS & WALL MOUNT TUBES

Step 1

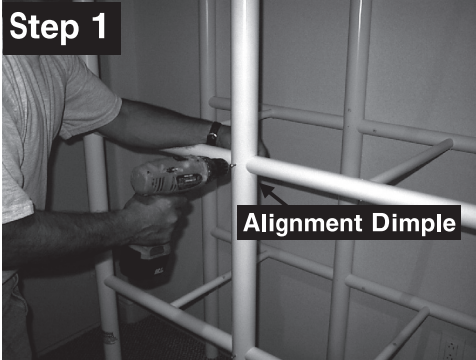


Fasten all Verticals to Horizontals. Make sure all joints are pressed firmly together, tight and against alignment dimples
Using 24 - #08 x 3/4" Fastening Screws (#1)
Note: 1 Fastener Per Joint, each grid, Front Side Only

Step 2

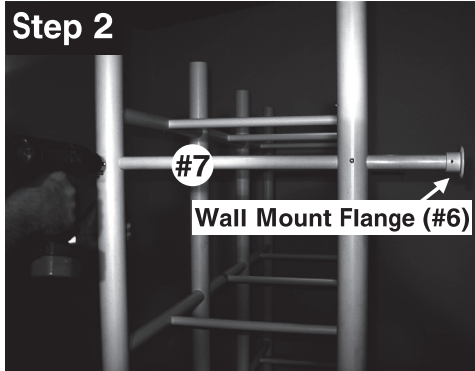

Move unit away from wall and insert 4 Wall Mount Extension Tubes (#7) at 4 Locations.
Fasten With 8 - #08 x 1-1/2" Extension Tube Fastening Screws (#2)
Note: 1 Fastener Per Joint Front Side Only

Step 3

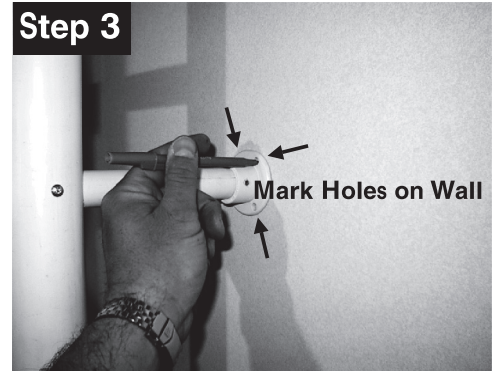

Slide Wall Mount Flanges (#6) into Wall Mount Tubes (#7) Place unit against wall where it is to be mounted and mark Wall Flange holes.
Note: Do NOT fasten at this time. Make sure unit remains in position at all 4 locations while marking holes.

FASTENING BIN WAREHOUSE TO WALL



Move unit away from wall and remove Wall Flange from Tube and mount Flange to wall using 12 #10 x 1-1/4" Wall Mount Flange Screws (#3) and Plastic Wall Anchors (#4) if needed.
Note: If mounted into Masonry or Drywall, drill three 1/4" holes to accept Plastic Wall Anchors.



Slide unit back against wall while inserting all 4 Wallmount Extension Tubes (#7) into Wallmount Flanges (#6) and fasten with 4 - #08 x 3/4" Fastening Screws (#1).
Note: 1 Screw per Flange



FINISHED!

Unit must be attached to wall to keep from tipping over!

Congratulations!

We Hope You Enjoy Your Bin Warehouse!